

BEFORE YOU BEGIN

WARNING · Make sure power is **OFF** at the electrical panel before starting installation or any maintenance. Indoor installation only unless otherwise noted.

SAFETY · This fixture must be wired in accordance with local electrical codes and ordinances. All work should be done by a qualified electrician.

NOTE · Read all instructions before installing. Keep this sheet for future reference.

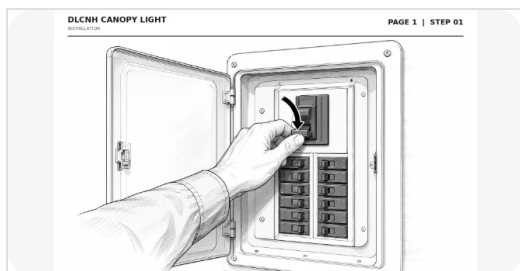
TOOLS REQUIRED

Saw · measuring tape · electrical wiring suitable for the application · wire nuts · screwdriver.

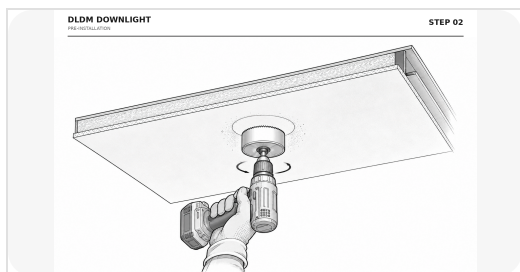
CUT-HOLE DIMENSIONS

TRIM	TYPE	CUT-OUT
DLT-4-WRS	White round, standard	Ø 3.74"
DLT-4-WSS	White square, standard	3.74" × 3.74"
DLT-4-TLR	Trimless round	Ø 3.74"
DLT-4-TLS	Trimless square	4.25" × 4.25"

PRE-INSTALLATION

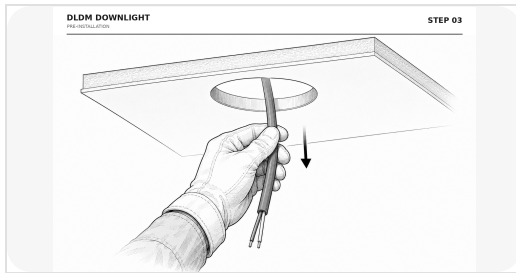
**01**

Turn power **OFF** at the electrical panel.

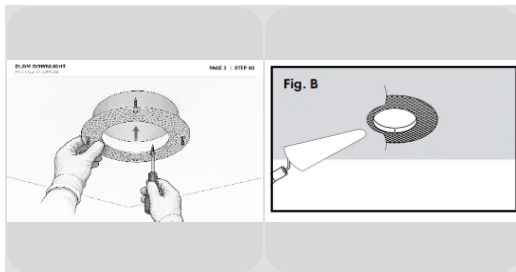
**02**

Locate a suitable position and cut the ceiling to the appropriate cut-out size (see table above).

PRE-INSTALLATION (CONTINUED)

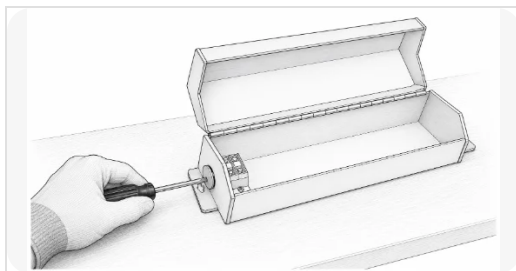
**01**

Run electrical wire from the switch (power supply) through the mounting hole.

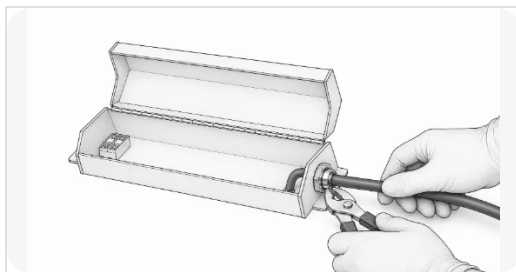
**02**

For Trimless Flange installation, align the inside edge of the trimless flange (zero clearance plaster frame to drywall hole) and screw.

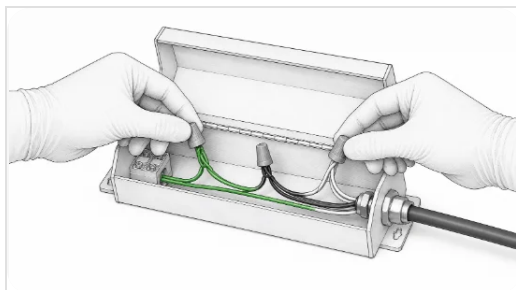
DRIVER WIRING

**01**

Open the hardwire box swing cover and remove the appropriate knockout(s).

**02**

Insert the electrical supply cable through the knockout and secure with a cable connector.

**03**

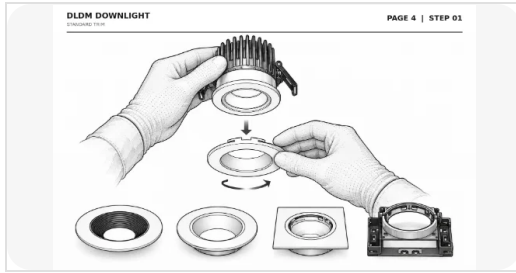
Using wire nuts, connect green ground wire of cable to green wire on box, black wire of cable to black wire on box, and white wire of cable to white wire on box. Close the box

DRIVER WIRING (CONTINUED)

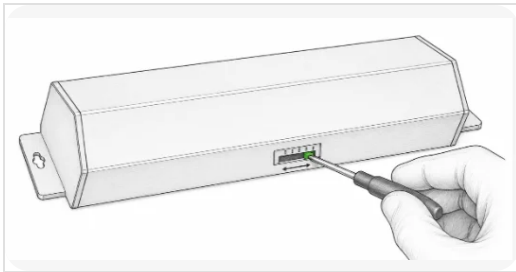
**04**

Insert hardwire box through the mounting hole.

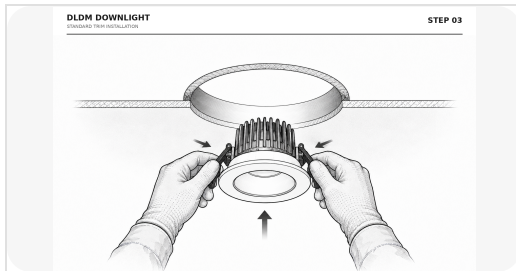
FIXTURE INSTALLATION — STANDARD TRIM

**01**

Mount the appropriate trim (Round or Square) onto the module.

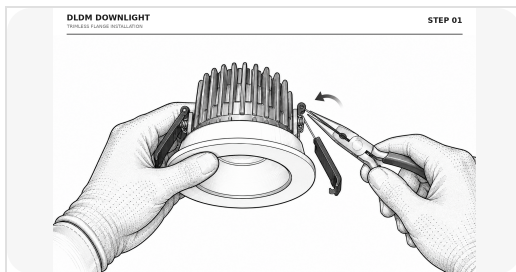
**02**

Select CCT.

**03**

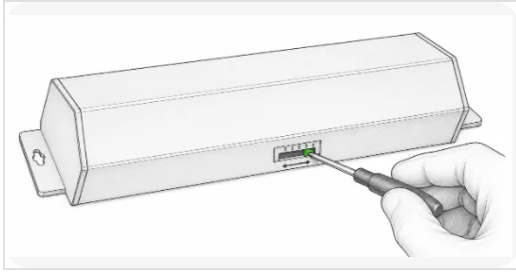
Hold back springs and raise into the ceiling to install.

FIXTURE INSTALLATION — TRIMLESS FLANGE

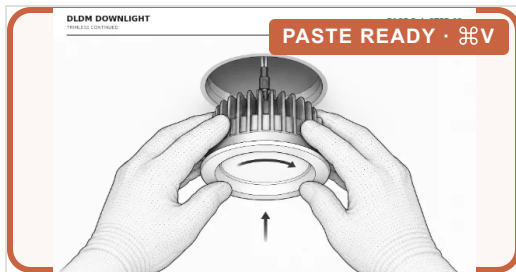
**01**

Use pliers to remove the spring on the side of the LED module.

FIXTURE INSTALLATION — TRIMLESS FLANGE (CONTINUED)



01 Select CCT.



02 Raise module and twist into ceiling.

DISCLOSURE

This guide is provided for qualified installers and licensed electrical contractors. All electrical connections must comply with the National Electrical Code (NEC) and applicable local building and fire codes. Work should be performed only by personnel trained in low-voltage and line-voltage lighting installation.

DirectLED is not liable for injury, property damage, or product failure resulting from improper installation, modification, or use outside the specifications described in this document. Always disconnect power at the breaker before servicing any fixture.

Product specifications, dimensions, and accessory kits are subject to change without notice. Photography and diagrams in this guide are for reference only and may not reflect the exact finish, hardware, or revision of the product shipped. Where a discrepancy exists between this guide and the physical product, contact DirectLED technical support before proceeding.

© 2026 DirectLED. All rights reserved. This document may not be reproduced or distributed without written permission.

